WW REXYGEN

www.rexygen.com

Getting started with $\mathsf{REXYGEN}$ on Monarco HAT

User guide

REX Controls s.r.o.

Version 2.50.12 2022-11-22 Plzeň (Pilsen), Czech Republic

Contents

1	Intr	roduction	3
	1.1	Features of the REXYGEN system	3
	1.2	Structure of the REXYGEN system	4
	1.3	Programming in the REXYGEN system	4
	1.4	Main components of the REXYGEN system	4
		1.4.1 REXYGEN Studio – the development environment	4
		1.4.2 REXYGEN HMI Designer	5
		1.4.3 REXYGEN Compiler	5
		1.4.4 RexCore	5
		1.4.5 REXYGEN Diagnostics	5
2	Inst	tallation of REXYGEN development tools	6
	2.1	Windows 7/8/10	6
		2.1.1 Installation procedure	6
		2.1.2 Uninstall procedure	7
	2.2	GNU/Linux	7
3	Incl	talling the runtime modules of the REXYGEN system on Monarco	
0	11120	taining the runtime modules of the REATGEN system on Monarco	
U	HA	-	8
Ŭ		-	8 8
U	HA	T	
U	HA 3.1	T Install using operating system image with REXYGEN	8
0	HA 3.1 3.2	T Install using operating system image with REXYGEN	8 8
0	HA 3.1 3.2 3.3	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi	8 8 9
4	HA 3.1 3.2 3.3 3.4 3.5	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders	
	HA 3.1 3.2 3.3 3.4 3.5	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders ensing REXYGEN using REXYGEN DWM on Monarco HAT	8 9 10 10
	HA 3.1 3.2 3.3 3.4 3.5 Lice	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders ensing REXYGEN using REXYGEN DWM on Monarco HAT	8 9 10 10 11
	HA 3.1 3.2 3.3 3.4 3.5 Lice 4.1	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders ensing REXYGEN using REXYGEN DWM on Monarco HAT Obtaining a DEMO licence	8 9 10 10 10 11 12
	HA 3.1 3.2 3.3 3.4 3.5 Lice 4.1 4.2	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders Installed files and folders Installed files and folders Obtaining a DEMO licence Obtaining a permanent licence	8 9 10 10 11 12 15
4	HA 3.1 3.2 3.3 3.4 3.5 Lice 4.1 4.2	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders Installed files and folders Installed files and folders Pensing REXYGEN using REXYGEN DWM on Monarco HAT Obtaining a DEMO licence Obtaining a permanent licence 4.2.1 Activation of the permanent licence Fault REXYGEN project on Monarco HAT	8 9 10 10 11 12 15 15
4	HA 3.1 3.2 3.3 3.4 3.5 Lice 4.1 4.2	T Install using operating system image with REXYGEN Installation with a script Manual installation on running Raspberry Pi Starting the runtime Installed files and folders Installed files and folders Installed files and folders Installed files and folders Obtaining a DEMO licence Obtaining a permanent licence 4.2.1 Activation of the permanent licence Activation of the permanent licence Starting REXYGEN project on Monarco HAT Control Monarco HAT from HMI	8 8 9 10 10 11 12 15 15 17

6	Configuration, compilation and execution	23
	6.1 Creating a new project	. 23
	6.2 Compiling and running a project	. 28
	6.3 Adding a user interface (HMI)	. 34
	6.4 Ready for interaction with the outer world	. 40
7	I/O configuration for the Monarco HAT	41
	7.1 Physical connections	. 41
	7.2 Adding inputs and outputs to the project	
	7.3 Working with I/O signals	
	7.3.1 Modifications in the project main file	
	7.3.2 Modifications in the task	
	7.4 Updating the HMI	
	7.5 Additional information	
	7.5.1 Detailed description of the driver	. 48
	7.5.2 Examples .	
8	Summary	49
Α	Graphical HMI with REXYGEN HMI Designer	50
Α	r	50 50
Α	A.1 Initializing the HMI design	. 50
Α	A.1 Initializing the HMI designA.2 Adding the first HMI components	. 50 . 52
Α	A.1 Initializing the HMI designA.2 Adding the first HMI componentsA.3 Linking HMI components with the running algorithm	. 50 . 52 . 54
Α	 A.1 Initializing the HMI design A.2 Adding the first HMI components A.3 Linking HMI components with the running algorithm A.4 Adding more HMI components 	. 50 . 52 . 54 . 59
Α	 A.1 Initializing the HMI design A.2 Adding the first HMI components A.3 Linking HMI components with the running algorithm A.4 Adding more HMI components 	. 50 . 52 . 54 . 59 . 60
	 A.1 Initializing the HMI design A.2 Adding the first HMI components A.3 Linking HMI components with the running algorithm A.4 Adding more HMI components A.5 Additional links to the running algorithm A.6 The final steps 	. 50 . 52 . 54 . 59 . 60 . 61
В	 A.1 Initializing the HMI design A.2 Adding the first HMI components A.3 Linking HMI components with the running algorithm A.4 Adding more HMI components A.5 Additional links to the running algorithm A.6 The final steps Raspberry Pi OS image with REXYGEN 	. 50 . 52 . 54 . 59 . 60 . 61 64
	 A.1 Initializing the HMI design A.2 Adding the first HMI components A.3 Linking HMI components with the running algorithm A.4 Adding more HMI components A.5 Additional links to the running algorithm A.6 The final steps 	. 50 . 52 . 54 . 59 . 60 . 61 . 64
в	A.1 Initializing the HMI design	. 50 . 52 . 54 . 59 . 60 . 61 . 64 . 64 . 65
	A.1 Initializing the HMI design	$\begin{array}{c} \cdot & 50 \\ \cdot & 52 \\ \cdot & 54 \\ \cdot & 59 \\ \cdot & 60 \\ \cdot & 61 \\ 64 \\ \cdot & 64 \\ \cdot & 65 \\ 66 \end{array}$
в	A.1 Initializing the HMI design	$\begin{array}{cccccccccccccccccccccccccccccccccccc$
в	A.1 Initializing the HMI design	$\begin{array}{cccccccccccccccccccccccccccccccccccc$
в	A.1 Initializing the HMI design	$\begin{array}{cccccccccccccccccccccccccccccccccccc$

Introduction


The **REXYGEN** system is a family of software products for automation projects. You can use it in all fields of automation, robotics, measurements and feedback control.

The runtime core of the REXYGEN system turns your Raspberry Pi into a programmable device which will run your algorithms.

1.1 Features of the **REXYGEN** system


- Graphical programming without hand-coding
- Programming control units on a standard PC or laptop
- User interface for desktop, tablet and smartphone (HMI)
- Wide family of supported devices and input-output units (including Monarco HAT)
- Industry-proven control algorithms
- Easy integration into business IT infrastructure (ERP/BMS)
- REST API for seamless integration into Industry 4.0 and (I)IoT solutions

1.2 Structure of the **REXYGEN** system

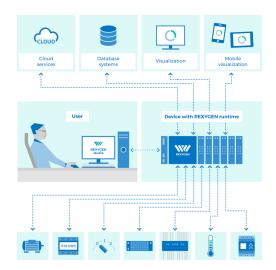

1.3 Programming in the **REXYGEN** system

The REXYGEN system offers a graphical development environment for programming the algorithms. You can use standard desktop or laptop PC. You create the algorithms from the so-called function blocks. The library includes countless items (timers, comparators, filters, PID controllers and many more).

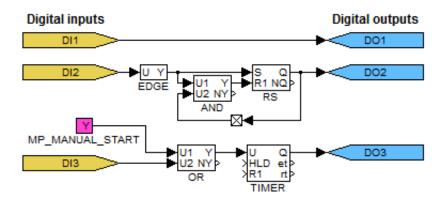

1.4 Main components of the **REXYGEN** system

1.4.1 **REXYGEN Studio** – the development environment

REXYGEN Studio is a developer's tool which runs on a standard PC with Windows. You create the algorithms using the function block library¹ of the **REXYGEN** system [1]. The

 $^{^1{\}rm The}$ IEC 61131-3 standard defines Function Block Diagram (FBD) as one of the PLC programming techniques.

library contains simple comparators and timers as well as advanced blocks for signal processing and feedback control (PID controllers etc.). You compile your project on your PC and run it on your Raspberry Pi.

Once running, you can watch your algorithm in real-time. Just select the signals and function blocks of your interest. You can also obtain detailed hierarchical information about the running algorithm and diagnose the runtime core and execution of your algorithm. You can connect via local network or over the Internet.

1.4.2 **REXYGEN HMI Designer**

The REXYGEN HMI Designer is another developer's tool intended for designing graphical user interface (or HMI, Human Machine Interface, if you prefer) for your algorithms. The user interface is included in the project and it is copied to your Raspberry Pi along with the algorithm.

1.4.3 **REXYGEN** Compiler

The REXYGEN Compiler converts your algorithms into binary code of the REXYGEN system. The compiler is almost invisible for the user, it is invoked from the REXYGEN Studio development environment. The compiler detects and reports possible errors in your algorithms.

1.4.4 RexCore

The RexCore (REXYGEN runtime core) service runs on the target device (Raspberry Pi). Once installed, it runs in the background and therefore it is almost invisible for the user. It handles timing and execution of your algorithms and provides various services. The individual tasks are prioritized and executed using preemptive multitasking. The RexCore service is automatically started at system startup.

RexCore further contains an integrated webserver providing user interface (HMI) and REST API. Chapter 3 deals with installing all the necessary modules on Raspberry Pi.

1.4.5 **REXYGEN** Diagnostics

With REXYGEN Diagnostics you can diagnose the runtime core and execution of your algorithm. It is an alternative standalone tool for commissioning and diagnostics of control algorithms. All the diagnostic functions are included in REXYGEN Studio, therefore REXYGEN Diagnostics can be considered obsolete. You can connect via local network or over the Internet.

Installation of REXYGEN development tools

This chapter describes the steps to install and uninstall the development tools of the REXYGEN system on Windows 7/8/10 operating systems. The tools also run on various GNU/Linux distributions using Wine¹.

2.1 Windows 7/8/10

The installation package of REXYGEN development tools contains the REXYGEN Studio and REXYGEN HMI Designer development environments, the REXYGEN Compiler compiler and the REXYGEN Diagnostics tool. It also includes the RexCore (REXYGEN runtime core) module for developing and testing purposes.

The installation package can be downloaded from

https://www.rexygen.com/software-download.

The installation process requires the administrator rights on your PC.

2.1.1 Installation procedure

- Run the REXYGEN-X.XX.XXX.PPP.exe downloaded from https://www.rexygen.com/software-download.
- 2. Select the language and follow the installation wizard.
- Select the target installation folder, the default is C:\Program Files\REX Controls\REXYGEN X.XX.XX.XXX.
- 4. Afterwards you can select the components to install. The requirements are quite low (approx 400 MB disk space) therefore the Full install option is recommended.
- 5. The following steps are standard and do not require further explanation.

¹http://www.winehq.org

There is no need to restart the system after installation.

2.1.2 Uninstall procedure

The common procedure can be used to uninstall REXYGEN development tools – go to *Control panel* and choose *Install/Uninstall programs*.

2.2 GNU/Linux

On various GNU/Linux distributions, you may install the development tools using Wine² 2.0 or later. Although we test the development tools in Wine regularly, please note that this is meant for experienced users and limited support is provided.

Follow the instructions for installation under Windows 7/8/10 given in section 2.1. The installation is started with wine REXYGEN-X.XX.XX.XXX-PPP.exe command entered at the console prompt. Some distributions (e.g. Ubuntu) allow running the installator by clicking the REXYGEN-X.XX.XXX.PPP.exe file.

 $^{^{2}}$ http://www.winehq.org

Installing the runtime modules of the REXYGEN system on Monarco HAT

3.1 Install using operating system image with REXYGEN

IMPORTANT: This procedure will delete all old data and settings. Make sure you have all the necessary files stored elsewhere!

- It is highly recommended to use the latest version of official Monarco HAT OS image with REXYGEN which you can download from http://download.rexcontrols.com/images/.
- After you download the file, write it to a SD card with a capacity of 4 GB or more. You can use a Win32 Disk Imager for example: https://sourceforge.net/projects/win32diskimager/.
- 3. Put the SD card in and power up your Monarco HAT.
- 4. After operating system expansion (which is done automatically with the first boot), you can log in via SSH with name pi and password monarco.io. Please change the password using raspi-config or passwd as soon as possible.

For more information about preinstalled image see the Appendix B.

3.2 Installation with a script

REXYGEN runtime may be also installed with a script that automates all the installation tasks. Currently, following platforms are supported for full automatic installation: plain Raspberry Pi, Monarco HAT, UniPi 1.1, PiFace Digital.

It is necessary to have a correctly configured Internet connection on your Raspberry Pi and running the so-called Raspberry OS distribution of GNU/Linux¹ prior to using this guide. Visit http://www.raspberrypi.org for more information.

For plain Raspberry Pi, run the following commands:

```
wget -nc https://download.rexcontrols.com/scripts/rex-install-rpi.sh
chmod +x rex-install-rpi.sh
sudo ./rex-install-rpi.sh
```

For Monarco HAT, run the following commands:

```
wget -nc https://download.rexcontrols.com/scripts/rex-install-monarcohat.sh
chmod +x rex-install-monarcohat.sh
sudo ./rex-install-monarcohat.sh
```

For UniPi version 1.1, run the following commands:

```
wget -nc https://download.rexcontrols.com/scripts/rex-install-unipi1_1.sh
chmod +x rex-install-unipi1_1.sh
sudo ./rex-install-unipi1_1.sh
```

For PiFace Digital extension board, run the following commands:

```
wget -nc https://download.rexcontrols.com/scripts/rex-install-pifacedigital.sh
chmod +x rex-install-pifacedigital.sh
sudo ./rex-install-pifacedigital.sh
```

These scripts always install the stable branch of REXYGEN. The scripts also provide --testing and --next parameters (e.g. sudo ./rex-install-rpi.sh --testing) to install development branches. The "testing" branch contains a REXYGEN version that is to be released soon, but still under testing. The "next" branch contains the current state of a next REXYGEN version under development. Use these options carefully.

3.3 Manual installation on running Raspberry Pi

It is also possible to install the RexCore (REXYGEN runtime core) on running Raspberry Pi manually. Following instructions guide you through installation of REXYGEN runtime on plain Raspberry Pi OpenSource OS. See documentation for other platforms for specific installation steps.

1. Install some necessary packages:

```
sudo apt update
sudo apt install wget gnupg2
```

2. Add **REXYGEN** public key:

¹RexCore should also work on any other distribution based on Debian (e.g. Ubuntu).

wget -nc https://download.rexcontrols.com/files/key/rex-debian-key.pub sudo apt-key add rex-debian-key.pub

3. Add the repository to /etc/apt/sources.list or create a new *.list under /etc/apt/sources.list.d/ with the following content:

deb http://download.rexcontrols.com/repositories/debian-rex-2.50/ bullseye non-free deb http://download.rexcontrols.com/repositories/rex-dwm/debian bullseye non-free

Replace bullseye with buster or stretch if you are still running the older Debian distribution. Replace debian-rex-2.50 with debian-rex-2.50-testing or debian-rex-2.50-next to install development branches. The "testing" branch contains a REXYGEN version that is to be released soon, but still under testing. The "next" branch contains the current state of a next REXYGEN version under development. Use these options carefully.

4. Update package list:

sudo apt update

5. Install REXYGEN runtime and DWM:

```
sudo apt install -y --install-recommends rexygen-runtime
sudo apt install rex-dwm
```

6. Perform specific installation steps for your platform (Monarco HAT, UniPi 1.1, PiFace Digital etc.).

3.4 Starting the runtime

Right after the installation, the RexCore runtime module is started automatically in the background as a daemon and it is possible to establish connection between the host PC and the Monarco HAT using the REXYGEN Studio program. RexCore also automatically runs upon system (re)start.

3.5 Installed files and folders

Please refer to the RexCore user guide [2] for detailed information about the files and folders of the REXYGEN system runtime modules.

Licensing REXYGEN using REXYGEN DWM on Monarco HAT

The first thing you will need is to get the license. The fastest way is to use the REXYGEN DWM tool. Open your web-browser and input IP address of Monarco HAT. You should see the **Device is not licensed!** message on the bottom of the screen. Please, click on the Licensing.

	\\\/	Resources :=				
ē	Resources	Uptime	CI	טי		
0	System Info	Current time: 2020-09-16 14:39:09	Cores:	4		
÷	Network	Startup time: 2020-09-16 14:38:04	Model:	ARMv7 Processor rev 4 (v7I)		
:0:	Settings 🗸 🗸	Uptime: a minute	Hardware:	BCM2835		
	5		Serial:	0000000f740f3f0		
2	Service	RAM				
•	Security		Load average over 1 minute:	1.22		
-		Total: 905.06 MB	Load average over 5 minutes:	0.42		
	File Browser	Free: 777.11 MB	Load average over 15 minutes:	0.15		
Ē	Logs	Available: 785.09 MB	Processes (running/total):	1/112		
	Password					
462			Disks			
Ð	Archives	🗹 ext4 🗹 vfat	🗖 tmpfs	devtmpfs		
07	Licensing					
		Device: Device is not licensed! Label: Turce	mcblk0p2 acquire a valid licence.			

The licensing model of the **REXYGEN** system is quite simple:

• The development tools are free to use, you can install it on as many computers as you want.

• The RexCore runtime module always needs a licence to run on your Monarco HAT. There are DEMO licences available at no cost and there are permanent licences which you can purchase. Each Monarco HAT needs an individual licence.

4.1 Obtaining a DEMO licence


The DEMO licence is intended for evaluating, testing and educational purposes. Feel free to experiment with the DEMO licence as long as you need. Commercial use of the DEMO licence is not allowed.


When you try to run your algorithm on a device which does not have a valid licence, you are offered a few options. Unless you already have a licence key or a licence voucher, you'll need to get a DEMO licence.

=	***	Licensing
	Resources	Active Licence
0	System Info	Site ID Y6CE-8TTS-FXCL-MJ0E-3865-UWU9-TP67-KZG7
(:-	Network	
:0:	Settings	, No active site keys available <u>Get demo licence</u>
٩	Service	
•	Security	Configuration
	File Browser	Apply Voucher Apply Licence Keys
Ē	Logs	Voucher
ð	Password	
Ð	Archives	Description for your reference
04	Licensing	APPLY VOUCHER

Click on <u>Get demo licence</u> and you will be redirected to the registration form. Identify yourself and you'll receive a DEMO licence key via e-mail. The licence key is called a **SiteKey**.

=	\\//		REXYGEN - Licensing	÷
		De	molicence	
\checkmark	Use Voucher		If you have an account already, try to log in first.	
U	DEMO Licence		Get demo licence	
			SiteID (hardware identifier of your device)* Y6CE-8TTS-FXCL-MJQE-3865-UWU9-TP67-KZG7	
			Description (for your reference) crush test machine	_
			E-mail* johndoe@domain.com	_
			First name* John	_
			Last name* Doe	_
			V I'm not a robot	
			SUBMIT	1

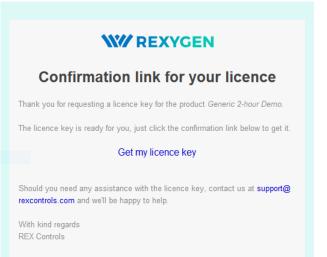

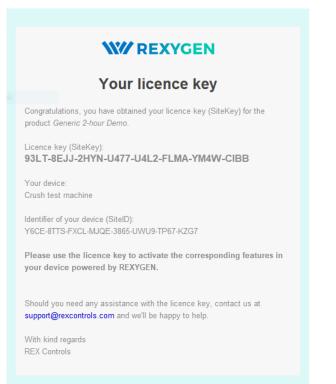

Once you have your DEMO licence key (SiteKey), apply it in REXYGEN DWMby selecting Apply Licence Keys and clicking on Apply keys.

=	\\	Licensing
	Resources	Active Licence
0	System Info	Site ID
((+	Network	BNI8-W33Y-64X6-93XJ-WDHQ-RMXG-NBK4-4J7G
0	Settings v	No active site keys available Get demo licence
٩	Service	
Ø	Security	Configuration
	File Browser	Apply Voucher Apply Licence Keys
Ē	Logs	Enter site keys 93LT-8EJJ-2HYN-U477-U4L2-ELMA-YM4W-CIBB
8	Password	
Ð	Archives	
07	Licensing	
		<u>A</u>
		APPLY KEYS

Evaluation version of RexCore (REXYGEN runtime core) is functional for 2 hours. It is possible to run your algorithm on the Monarco HAT but you cannot store it permanently.

The algorithm resides only in the RAM memory therefore it will not run after a restart or power-up. You can use almost all function blocks, see [1]. The RexCore runtime core on the target device is terminated after 2 hours of operation in demo mode without any warning. After a restart, you have another 2 hours for your experiments.

4.2 Obtaining a permanent licence

It is necessary to activate the RexCore runtime module and optional additional modules for permanent operation. This can be done using the licence, which you can obtain at

```
www.rexygen.com/pricing
```

4.2.1 Activation of the permanent licence

Each device running the RexCore runtime module is identified by the so-called SiteID tag. The purchased licence is associated with the hardware device, i.e. with the SiteID tag.

1. Open your favorite web-browser on the desktop PC and fill in the IP address of Monarco HAT. Once the DWM appears, select *Licensing* \rightarrow *Apply Voucher* and enter your licence voucher code.

≡	\\\/	Licensing
Ę	Resources	Active Licence
0	System Info	Site ID Y6CE-8TTS-FXCL-M3QE-3865-UWU9-TP67-KZG7
((+	Network	
٠	Settings ~	Site Keys
٩	Service	93LT-8EJJ-2HYN-U477-U4L2-FLMA-YM4W-CIBB
0	Security	Target is running in DEMO mode.
	File Browser	
Ē	Logs	Configuration
8	Password	Apply Voucher Apply Licence Keys
-0	Archives	V2Q-ZE1-2UY
07	Licensing	Description crush test machine
		for your reference APPLY VOUCHER

2. If other licenses are already present, a new window will appear where you can specify what should happen to the old licenses. Use the *Overwrite* option if the Monarco HAT is running in DEMO mode. This is the last and irreversible step.

≡	W	Licensing 🔚
	Resources System Info Network Settings Service Security File Browser Logs Password	Active Licence Site ID Y6CE-8TTS-FXCL-MJQE-3865-UWU9-TP67-KZG7
49 07	Archives	Description crush test machine
	g	for your reference APPLY VOUCHER

3. The so-called SiteKey licence key is generated from your licence voucher and it is stored in your device, which is shown in the *Active License* panel. The licence key allows permanent operation of the runtime core. It is highly recommended to check the licence again after a reboot of the device.

=	\\\/	Licensing	≔
	Resources		
		Active Licence	
0	System Info	Site ID YGCE-8TTS-FXCL-MJQE-3865-UWU9-TP67-KZG7	
(:	Network		_
-01	Settings	Site Keys	
٩	Service	FYLN-P5J9-6F4Z-R6UI-7YI2-GSJE-5TT9-DDEN	
	C	LTCU-YA65-HWC3-TAKY-K2CH-C7ZR-CULU-865T	
Ø	Security	4A7Z-AUY3-N5ZS-GBE6-9PPF-AZ3P-PZ2P-SHE7	
	File Browser	L8ZW-GWB3-CF5R-HGUW-8GMS-P5LR-KAGW-329C	
Ē	1.000	G3UP-PLDQ-PDGD-MHBK-F6N6-MEP5-4DZK-UNXZ	_
E	Logs	2NEX-M6JD-WNMN-8QGQ-GMYZ-BJLJ-NS9N-5EWU	
6	Password		=
Ð	Archives	Configuration	
07	Licensing	Apply Voucher Apply Licence Keys	
		Voucher V2Q-ZE1-2UY	
		Description	_
		crush test machine	_
		for your reference APPLY VOUCHER	
		APPLY VOUCHER	-

Default REXYGEN project on Monarco HAT


In order to help you speed up a start with REXYGEN and Monarco HAT we have create an example project for Monarco HAT which is already preinstalled on the image with REXYGEN (installation is described in Section 3.1). The project serves as a basic validation of the installation process and as a starting point for more complex applications. One can control digital output(s) DO, analog output(s) AO, observe the state of digital inputs(s) DI and analog input(s) AI. These general inputs and outputs are present on all Monarco HAT models. The steps to create and develop a new project from scratch is described in Chapter 6 in detail.

IMPORTANT: If you have valid permanent licence stored on your Monarco HAT, this project will start automatically once RexCore (REXYGEN runtime core) starts. Otherwise, if you have only a Demo license, you must compile and download the project from the REXYGEN Studio on the Monarco HAT first. The project can be opened in the REXYGEN Studio using either the procedure described in Section 5.3, or the project can also be found in the Examples library as 0121-09_Monarco_HAT_Demo_Example¹. The process of compiling and running the project is described in Section 6.2.

5.1 Control Monarco HAT from HMI

The project contains graphical user interface (so-called Human-Machine-Interface) for easy control and observing of general outputs and inputs. The HMI can be found at URL address http://192.168.1.100:8008/hmi/index.html (replace 192.168.1.100 with the IP address of your Monarco HAT).

¹All examples which are part of the installation are marked by an ExampleID. The most up-to-date examples are available with the latest installation of development tools or at https://www.rexygen.com/example-projects/

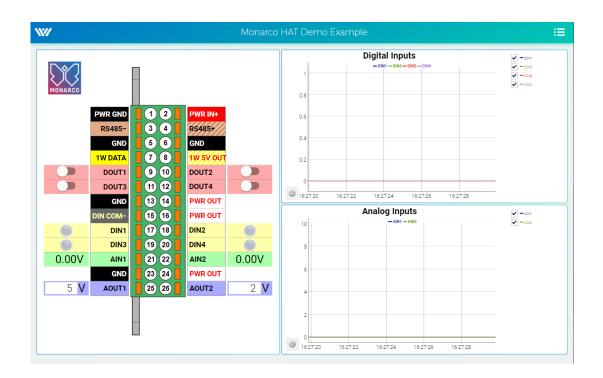

5.2 Control Monarco HAT through OPC UA


You can use the OPC UA interface to control your Monarco HAT too. Install any OPC UA Client and connect to the OPC UA Server, which is running right now on your Monarco HAT. There is the *UAExport* software used in this tutorial:


https://www.unified-automation.com/downloads/opc-ua-clients.html.

Click on Server in the Menu $\rightarrow Add \rightarrow Advanced mode$ and fill the Configuration Name and the Endpoint URL (replace 192.168.1.100 with the IP address of your Monarco HAT).


Configuration Name MyDevic	e
Discovery Advanced	
Server Information	
Endpoint Url	opc.tcp://192.168.1.100:4840/
Reverse Connect	
Security Settings	
Security Policy	None 👻
Message Security Mode	None
Authorities For Collins	
Authentication Settings	
Anonymous	
Username	Store
Password	
Certificate	
O Private Key	
Session Settings	
Session Name	
Connect Automatically	

After confirmation (OK), right-click on the new server name in the *Project* panel and choose *Connect*.

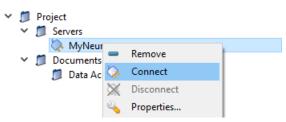

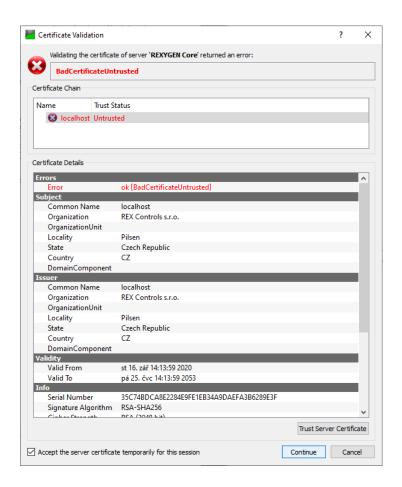

Congratulations, you are now connected to your Monarco HAT! You can now set the DO1 to value *true* for example. Navigate to *Address Space* panel and select DO1. In *Attributes* panel search *Value* \rightarrow *Value*, double-click on it, check the radio box and hit Enter. The first Digital outputs LED diod on Monarco HAT should glow. Detailed tutorial on using OPC UA with REXYGEN is there [3].

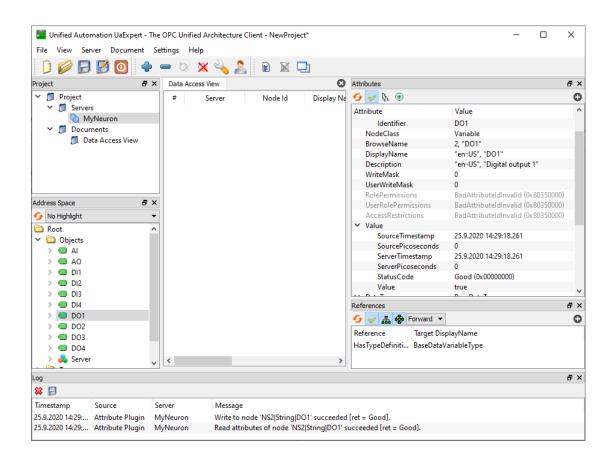


5.3 Loading project from Monarco HAT to REXYGEN Studio

After installation of REXYGEN development tools (described in Chapter 2), you can open the REXYGEN Studio on your PC and download algorithm of this default project from your Monarco HAT.

Select Load Project from Target Device from starting dialog or from $File \rightarrow Open$ Project from Target Device and connect to your Monarco HAT (replace 192.168.1.100 with the IP address of your Monarco HAT).

	W How would you like to start?						×
	Thank yo			choosing REX	YGEN!		
	REXYGEN			Start with a	Plain Proje	ect]
			Start from an Example Project				
			Open an Existing Project				
			La	ad Project fro	om Target [Device	
	🗌 Don't s	how this dia	log at	start	Clos	se	
W C	connect to the	target					×
C	onnection Detai	s					
Т	arget:	192.168.1	. 100:4	43981			
P	rotocol:	TCP/IP		•			
U	lser:	admin					
P	assword:						۲
S	ave Password:					ا 🌾 🛛	est
	Description			🗟 Add stat	ion to list	🛄 Tog	gle list
		🥖 Ca	onnec	Close	:		

Choose the directory where will be the project stored on your PC and hit OK.

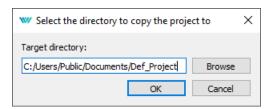

If everything went well, the project algorithm will appear.

Configuration, compilation and execution

The process of creating a control algorithm will be demonstrated on a very simple example with four Boolean variables representing manual switches. In Chapter 7, two of them will be replaced by physical inputs of the Monarco HAT. A software timer will be used for measuring the time when the variables are true (i.e. the switches are in the ON position). A Boolean signal will indicate that the interval of predefined length has elapsed.

6.1 Creating a new project


The project configuration is created using the REXYGEN Studio program. Each project consists of at least two .mdl files. The first file is the main file of the project, which is used for configuration of tasks, drivers, priorities and timing. The other file(s) contain the individual control algorithms (tasks).

First we'll create the example 0101-01 from scratch¹. Standard approach:

- 1. Run the REXYGEN Studio program. Start with a plain project and select a folder to save the project files in (e.g. D:\GettingStarted).
- 2. The folder will contain two important files:
 - myproject_exec.mdl
 - myproject_task.mdl

¹All examples which are part of the installation are marked by an ExampleID. The most up-to-date examples are available with the latest installation of development tools or at https://www.rexygen.com/example-projects/

3. The myproject_exec.mdl is the project main file. It contains one EXEC block from the EXEC library. The other block is the TASK block from the same library and it is renamed to myproject_task to reference the second file of the project (myproject_task.mdl), which will contain the algorithm (the so-called task).

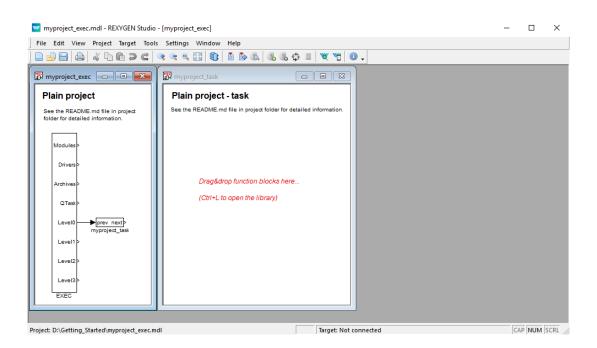

- 4. The task is connected to the LevelO output of the EXEC block and therefore its timing is defined by tick and ntickO parameters of the EXEC block.
- 5. The EXEC block (and any other block) can be configured by double-clicking on it. A block parameters and properties dialog appears. The parameters of all blocks of the REXYGEN system are described in the Help (press the F1 key) and in the Block reference manual [1].

	name:		Block type:	
EC			execlib \EXEC	
ck t	ype description:			
eal-t	time executive			
en b	olock documentation	<u></u>		Toggle quick reference
	eters Runtime	Style		
		Style		
cala	ar parameters			
	Parameter	Value	Туре	Description
1	target	Generic target device 💌	String	Target device
2	tick	0.05	Double	Base tick (period) of the r
3	ntick0	2	Long	Period of tasks in Level0 (
4	ntick1	50	Long	Period of tasks in Level1 (
5	ntick2	100	Long	Period of tasks in Level2 (
6	ntick3	1200	Long	Period of tasks in Level3 (
7	pri0	5	Long	Priority of tasks in Level0
	pri1	9	Long	Priority of tasks in Level1
8		13	Long	Priority of tasks in Level2
8 9	pri2	15		

- 6. Note that tick=0.05 and ntick0=2, therefore the task will run each 100 milliseconds $(0.05 \cdot 2 = 0.1s)$. There is no need to change any parameter at the moment. Close the dialog.
- 7. You can delete all the descriptive texts in project files. These have no effect on the functionality and can be considered programmer's comments.
- 8. Open Block Library, choose *View/Block Library* in the menu or use the **1** icon from the toolbar.
- 9. By default, the library is in *Tree view* mode where the blocks are organized in sublibraries. Their location is always denoted as sublibrary/block, e.g. LOGIC/AND for the logical AND block in the LOGIC sublibrary. Inside a sublibrary, the blocks are ordered in alphabetical order.

ile Edit View Project Target Tools				
Y	 Market and the second se			- • ×
See the README.md file in project folder for detailed information.	See the REA		Quick refe	rence
Modules>	Tree view	O List view		Boolean (logic) constant
Drivers >	Block name > GEN > INOUT > LOGIC	Description		on≯ bool CNB
QTask>		Absolute value Addition of two signals Addition of sixteen signals	Outp	Logical output of the block
myproject_task Level1> Level2>		Addition of eight signals Addition of four signals Boolean (logic) constant Enumeration constant Integer constant Real constant	Para YCN	ameters Boolean constant
EXEC	DIF_ DIV	Difference Division of two signals	•	Open block documentation


- 10. You can also switch the library to *List view* mode, where all the blocks are sorted alphabetically, regardless of the sublibrary they belong to.
- 11. Locate the following function blocks in the Block Library and drag them to the task file:
 - MATH/CNB constant of type Boolean. Once dropped, double-click its name and change it to CNB_SWITCH1. Double-click the block and set parameter YCN = off.
 - LOGIC/OR_ logical OR. Rename it to OR_A.
 - LOGIC/AND_ logical AND.
 - LOGIC/TIMER_ a timer block. Set parameter mode = 2: Delayed ON, pt = 5.0.
 - INOUT/Display a display to show values in real-time.
 - ARC/TRND real-time recording. Set parameters l = 2000, Title = My timer, leave the default values otherwise.
 - MATH/CNB constant of type Boolean, change name to CNB_RUN, set parameter YCN = on.

w myproject_exec.mdl - REXYGEN Studio - [myproject_exec] -							×					
-	ile Edit View											
		4 6 6 2	C	e e e		ă 🗟 🗟	₲₲\$ =	V VI 🔍 🗸				
	🔋 myproject_exec		×	😨 mypi	oject_task						• X	
	Modules >											
	Drivers >			CN	off) 3_SWITCH1		XU1 Y> XU2 NY>					
	Archives>						OR_A					
	QTask	•						AND	XU QA XHLD eta XR1 rta	>(???		
Ш	Level0	prev_next myproject_task						_	TIMER_	yu1 y1	<i>,</i>	
	Level2>									u2 y2 u3 y3	>	
	Level3 >									CNB_RUN X4 CNB_RUN XR1 iE TRND	>	
	EXEC									Hub		

- 12. Duplicate the CNB_SWITCH1 block with right mouse button dragging. Or simply Copy&Paste the block.
- 13. Duplicate the block 2 more times.
- 14. Duplicate also the OR_A block. Rename the duplicate to OR_B.

w myproject_exec.mdl - REXYGEN Studio	o - [myproject_exec]			-	×
File Edit View Project Target Too		⊾ ⊪ ⊪ ⇔ ≡ ∖	¥ \\ 10 _		
Image: Transmission Image: Transmission Imag				277 1 91 2 92 1 91 2 92 1 93 1 12 TRND	

15. Connect the blocks as shown below. To connect the blocks, drag the output arrow of one block to the input arrow of the other block using the left mouse button. The connection will be established when the line goes bold and green. After releasing the mouse button you can recognize a successfully connected line by its style. A full line terminated by a full arrow at the input of the connected block indicates a valid connection. A dashed red line ending with a thin arrow indicates an unconnected line. New branch of an existing line can be created by dragging an existing line with the right mouse button.

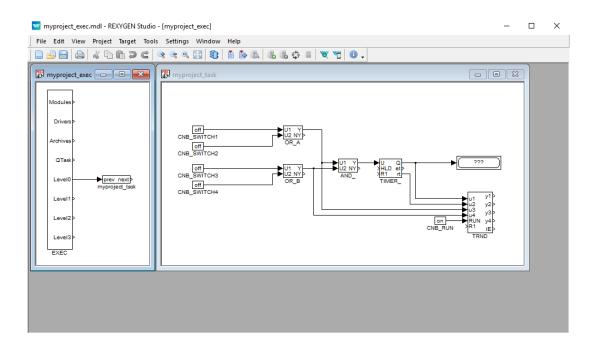


At this moment the executive configuration myproject_exec.mdl and the corresponding myproject_task.mdl file with the algorithm are ready. The algorithm will be evaluated in the direction of the arrows, starting from the source CNB blocks, passing through the OR_, AND_ and TIMER_ blocks and finishing at the Display and TRND blocks.

Congratulations, your first project is ready for compilation!

6.2 Compiling and running a project

The developed algorithm must be compiled to binary form prior to deploying. Pick *Project/Compile* from the menu or use the icon from the toolbar. The compiler output is displayed in the Compiler window. If no error is found, the myproject_exec.rex file is created.

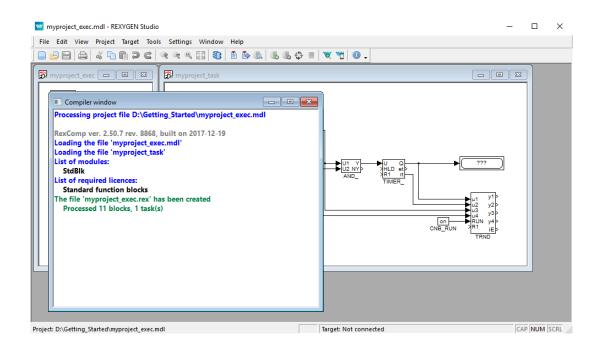

At this moment it is possible to deploy the control algorithm to the target platform. Use *Project/Compile and Download* in the menu or click the Compile and Download icon for this purpose. A dialog for defining the target device appears upon successful compilation.


i myproject_exec.mdl - REXYGEN Studio		- 🗆 🗙
File Edit View Project Target Tools Settings Window Help	w Download configuration to the target - 🗆 🗙	
」 □ 		
myproject_exec Compiler window Processing project file D:\Getting_Started\myproject_exec RexComp ver. 2.50.7 rev. 8868, built on 2017-12-19 Loading the file 'myproject_exec.mdl' Loading the file 'myproject_ex	Connection Details Target: 192.168.1.100 Protocol: TCP/IP User: admin Password: Save Password: Description Download options Method: Synchronize Progress Download colose Close	р уср уср уср уср уср уср уср
Project: D:\Getting_Started\myproject_exec.mdl	Connecting to target	CAP NUM SCRL

Enter the IP address of your Raspberry Pi in the Target field.


Enter REXYGEN login and password. The default user is admin and there is no password by default. Leave the other elements intact and click Download.

If there is no licence on your Raspberry Pi, you need to get one first. You can get a DEMO licence for free. See Appendix C for details and come back afterwards.


As soon as the download is complete it is possible to switch the REXYGEN Studio application to the so-called *Watch mode* and watch the control algorithm in real-time – click Watch.

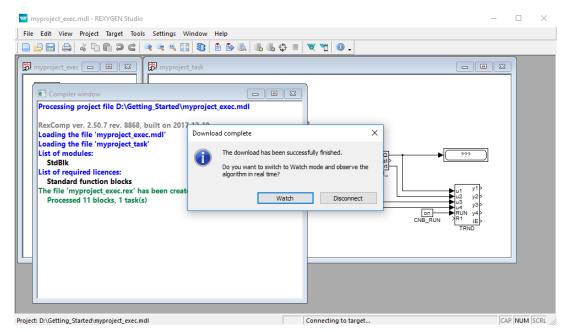

In the *Watch mode*, the background of all files goes gray and you cannot move or delete any blocks or connections. Right-click the TIMER_ block and select *Watch selection* in the menu to watch the inputs and outputs of the timer.

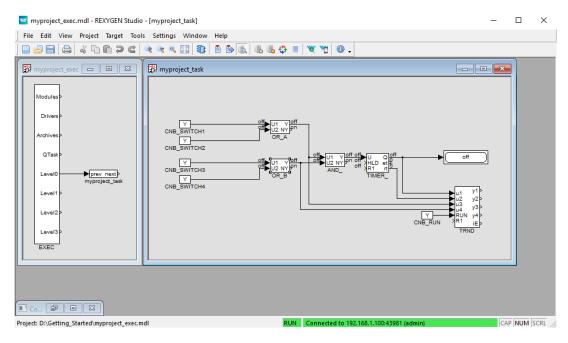

You can do the same with the OR_ and AND_ blocks (or any other selection).

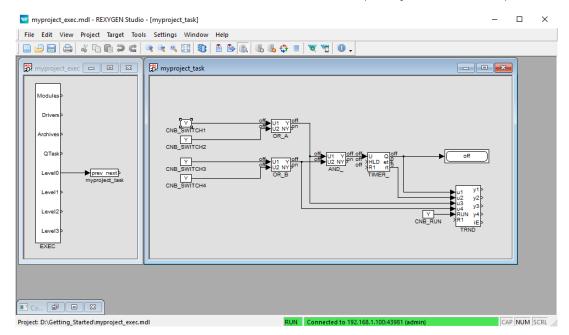


Now it is possible to double-click the CNB_SWITCH1 block and change the Boolean variable to YCN = on (tick the checkbox and click OK). Once you do the same with the CNB_SWITCH3 block, the outputs of both OR blocks are on and the Y output of the AND_ block goes on and the TIMER_ starts to count down. Observe the rt output.² Once the

 $^{^{2}}$ Do not get confused by the default 1 second refresh rate of the *Watch mode*. The algorithm on the target device runs each 100 milliseconds as mentioned earlier.


timer reaches zero, its output Q is set to on and it remains on as long as the U input is on.

You can double-click the TRND block to see the signals in a real-time graph. The red line is the output of the OR_A block, the magenta line is the output of the OR_B block, the green line is the remaining time of the timer and the blue line is the Boolean output of the timer.

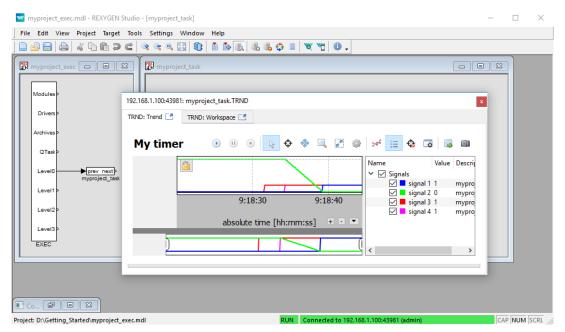

Try turning the CNB blocks off and change the pt parameter of the TIMER_ block. Afterwards turn the CNB blocks on again and observe the signals in the TRND block again. As you can see, you can modify any parameter in real-time, which allows you to fine tune your algorithm.

It is also possible to open a Diagnostics view of the algorithm. Pick Target/Diagnostics from the menu or click the 💝 icon and you will see the algorithm in a tree view which allows you to monitor the control algorithm in full detail. You can verify that the sampling rate of your algorithm is indeed 100 milliseconds. You can also adjust parameters of individual function blocks, which has the same effect as modifying them directly in the *Block properties* dialog.

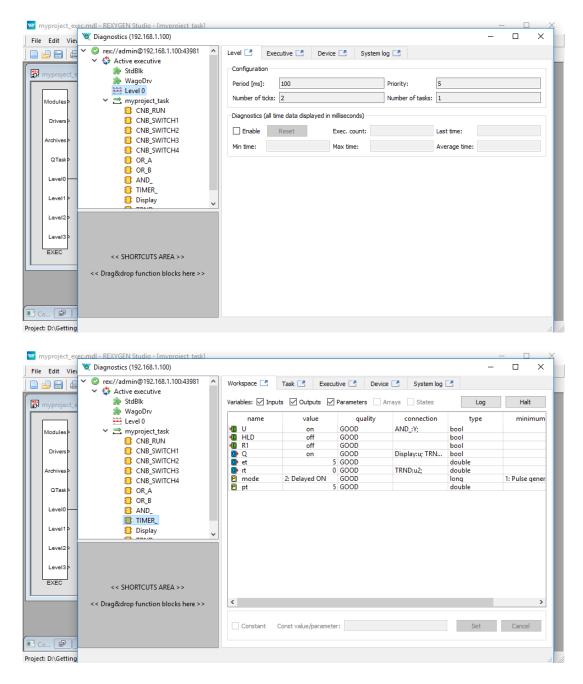

Note: There is also a standalone diagnostics program called REXYGEN Diagnostics. Click the REXYGEN Diagnostics icon ^{WC} and confirm the IP address of the target platform.

Now you can switch REXYGEN Studio back to the *Development mode*. You can do so by deactivating the *Watch mode* (use the \blacksquare icon). You are offered synchronization of the changed parameters with the source files of the project, choose No at this moment.


All changes made while in the *Watch mode* are not permanently stored in the target device (unless you decide so, see [4]). Upon restarting the RexCore runtime module the algorithm will start with the parameters defined in the project source files, which were valid when compiling and downloading the algorithm to the target device. To apply the changes permanently, you have to transfer the changes to the source files and *Compile and download* the project one more time which defines new startup values.

6.3 Adding a user interface (HMI)

The next step in developing a control algorithm is its user interface, or HMI, Human-Machine-Interface. It allows anyone (even those who are not familiar with the REXYGEN system) to interact with the algorithm. The HMI of the REXYGEN system relies on modern web-based technology and the HMI is therefore accessible via web browser on desktop PC, tablet or smartphone.

In this tutorial, a simple HMI will be created using the so-called WebBuDi technology. It provides very simple indicators and input elements to interact with the control algorithm via a web page (Web Buttons and Displays).

The steps to create the HMI are described below. This is how the HMI will look like in the end:

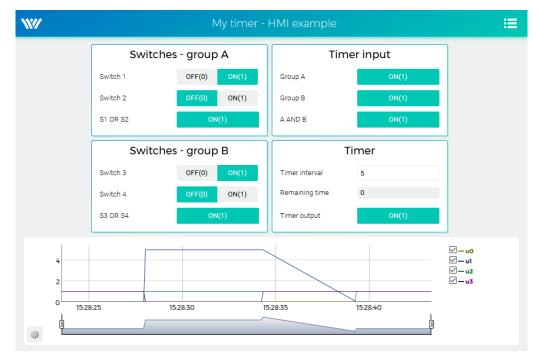


1. In the folder with the project files, create a hmisrc subfolder. Inside this folder, create a file named index.hmi.js and edit it with your favorite text editor. The content should be the following:

```
REX.HMI.init = function(){
//Indicators and virtual switches - group A
  var switchesA = {
    column: 1,
    title: 'Switches - group A',
    rows: [
      {type: 'DW', alias: 'switch1', desc: 'Switch 1',
        cstring: 'myproject_task.CNB_SWITCH1:YCN'},
      {type: 'DW', alias: 'switch2', desc: 'Switch 2',
        cstring: 'myproject_task.CNB_SWITCH2:YCN'},
      {type: 'DR', alias: 'S1orS2', desc: 'S1 OR S2',
        cstring: 'myproject_task.OR_A:Y'},
    ]
  };
  REX.WebBuDi.addSection(switchesA);
//Indicators and virtual switches - group A
  var switchesB = {
    column: 1,
    title: 'Switches - group B',
    rows: [
      {type: 'DW', alias: 'switch3', desc: 'Switch 3',
        cstring: 'myproject_task.CNB_SWITCH3:YCN'},
      {type: 'DW', alias: 'switch4', desc: 'Switch 4',
        cstring: 'myproject_task.CNB_SWITCH4:YCN'},
      {type: 'DR', alias: 'S3orS4', desc: 'S3 OR S4',
        cstring: 'myproject_task.OR_B:Y'},
    ]
  };
  REX.WebBuDi.addSection(switchesB);
//Timer input
  var timerInput = {
    column: 2,
    title: 'Timer input',
    rows: [
      {type: 'DR', alias: 'inputA', desc: 'Group A',
        cstring: 'myproject_task.AND_:U1'},
      {type: 'DR', alias: 'inputB', desc: 'Group B',
        cstring: 'myproject_task.AND_:U2'},
      {type: 'DR', alias: 'AandB', desc: 'A AND B',
        cstring: 'myproject_task.AND_:Y'},
    ]
```

```
};
  REX.WebBuDi.addSection(timerInput);
//Timer settings and status
  var timer = {
    column: 2,
    title: 'Timer',
    rows: [
      {type: 'AW', alias: 'interval', desc: 'Timer interval',
        cstring: 'myproject_task.TIMER_:pt'},
      {type: 'AR', alias: 'rt', desc: 'Remaining time',
        cstring: 'myproject_task.TIMER_:rt'},
      {type: 'DR', alias: 'timerQ', desc: 'Timer output',
        cstring: 'myproject_task.TIMER_:Q'},
    ]
  };
  REX.WebBuDi.addSection(timer);
  //Add real-time trend
  REX.HMI.Graph.addTrend({cstring: 'myproject_task.TRND'});
  REX.HMI.Graph.setMaxBufferSize(200);
  // Change title of the page
  REX.HMI.setTitle('My timer - HMI example');
}
```


2. This file will be processed when compiling the project. However, it is necessary to add the EXEC/HMI block into the project main file first.

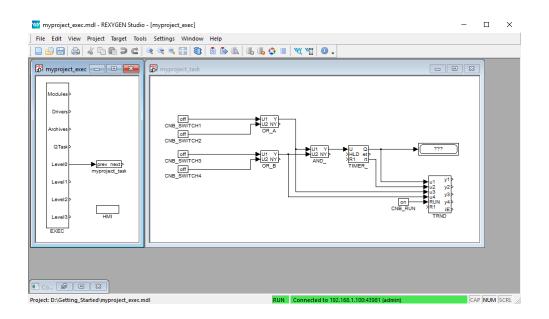

3. Double-click the HMI block to edit its parameters. Set GenerateWebWatch = off and confirm. WebWatch is another type of HMI, which you do not need at the moment. See [5] for details, it is a very interesting tool for developers and technicians.

k	name:		Block type:	Block type:		
I			execlib\HMI			
k	type description:					
11	configuration					
en	block documentation	<u>1</u>	<u> </u>	Toggle quick reference		
	meters Runtime					
		Style				
ca	lar parameters					
	Parameter	Value	Туре	Description		
1	IncludeHMI	🗹 on	Bool	Include HMI files in the pr		
2	HmiDir	hmi	String	Output folder for HMI files		
3	SourceDir	hmisrc	String	Source directory		
4	GenerateWebW	off	Bool	Generate WebWatch HMI		
5	GenerateRexHMI	🗹 on	Bool	Build HMI from SVG and J		
6	RedirectToHMI	🗹 on	Bool	Webserver will automatica		
7	Compression	off	Bool	Enable data compression		

4. The HMI is now an integral part of your project. Compile the project again and you will see that the compile log contains more information. The index.html file is generated from the source index.hmi.js file. All the HMI files are generated into the hmi subfolder (HTML, JS and CSS files) and included in the resulting binary myproject_exec.rex file.

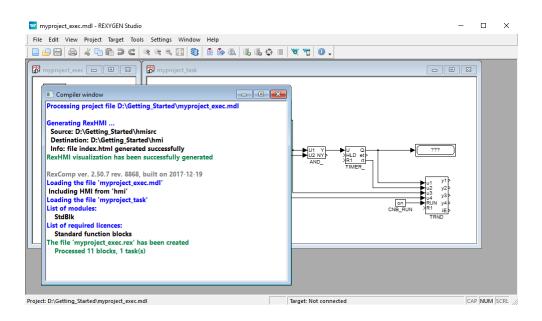

5. After you download the project to the target device, you can access the HMI via web browser. Go to menu *Target/Web Interface* which will open the webpage. Remember the default login credentials: admin with no password.

	<u>ଜ</u> ୁ ପ୍ର	2.168.1.100:8008/hmi/index.htm			⊻ ॥/ ₪
*//		My timer	- HMI example		
	Swite	ches - group A	Tim	ner input	
	Switch 1	OFF(0) ON(1)	Group A	ON(1)	
	Switch 2	OFF(0) ON(1)	Group B	ON(1)	
	S1 OR S2	ON(1)	A AND B	ON(1)	
	Swite	ches - group B	-	Timer	
	Switch 3	OFF(0) ON(1)	Timer interval	5	
	Switch 4	OFF(0) ON(1)	Remaining time	0	
	S3 OR S4	ON(1)	Timer output	ON(1)	
					□ – u0
4					⊻ — u1 ⊻ — u2
2					∠ – u3
0	15:22:55	15:23	15:23:05	15:23:10	

6. You can toggle the switches and observe the results. The virtual switches are linked

to the individual CNB function blocks therefore the effect is the same as toggling the values directly in REXYGEN Studio.

- 7. You can also change the timer setting and shorten or lengthen the interval.
- 8. See [5] for detailed information about WebBuDi elements and possible customization (colors, backgrounds etc.).
- The default URL address is http://192.168.1.100:8008/hmi/index.html (replace 192.168.1.100 with the IP address of your Monarco HAT).
- 10. The default port of the webserver (8008) can be changed in RexCore settings. See [2] for details.

Please note that there is also a program called REXYGEN HMI Designer, which allows you to create graphical user interfaces. Appendix A of this guide shows the steps to create a basic graphical interface. A more complex HMI is shown below solely for inspiration purposes.



6.4 Ready for interaction with the outer world

Well done! You have created the example 0101-01 from scratch³. You have learned the basic workflow for developing and running your algorithms using the REXYGEN system, which is the same for all platforms. Now it's time to add the so-called *input-output drivers* so that the algorithm can interact with sensors, actuators and external data.

³All examples which are part of the installation are marked by an ExampleID. The most up-to-date examples are available with the latest installation of development tools or at https://www.rexygen.com/example-projects/

Chapter 7

I/O configuration for the Monarco HAT


The previous chapter illustrated the process of creating a control algorithm in the REXY-GEN system and deploying it to the target device. But so far, the algorithm does not interact with the outer world, it is not connected to any physical signal (or external data).

We will use the input and output signals of the Monarco HAT for interaction with the real world.

As mentioned in Chapter 6, two physical switches will be connected as inputs and a software timer will control one output signal. In other words, this chapter is devoted to advancing from the generic example 0101-01 to example 0121-01 for the Monarco HAT.

7.1 Physical connections


Connect the switches as shown below. The motor is optional, the onboard LED will indicate the status of the output.

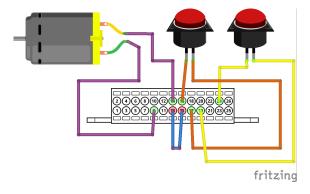

7.2 Adding inputs and outputs to the project

Now when we have everything wired up, it's time to include the physical signals into the algorithm. You need to expand your project main file with 2 additional function blocks to access the inputs and outputs from the control algorithm in your project. Insert the EXEC/MODULE and EXEC/IODRV blocks from the *Block library* and attach them to the EXEC block as shown below.

In the task file, delete the CNB_SWITCH1 and CNB_SWITCH3 blocks and replace them with INOUT/From blocks. These will be the input signals. Also add one INOUT/Goto block, which will serve as an output and which will be controlled by the timer. You already know that a new branch of a line is created by right-button dragging, don't you?

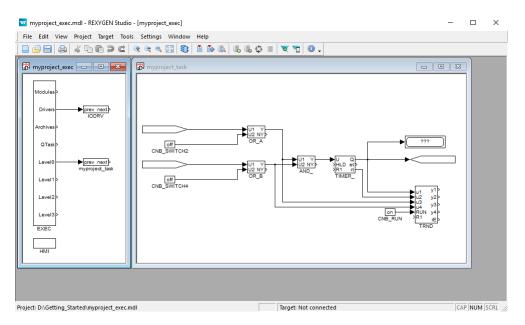

7.3 Working with I/O signals

7.3.1 Modifications in the project main file

Now we tell the compiler to use the Monarco HAT I/O driver. To do this, edit the IODRV block parameters. Link the IODRV block with the MonarcoDrv module by setting

• module = MonarcoDrv - CASE SENSITIVE!

Continue editing the IODRV block parameters. For Monarco HAT set the following:

- classname = MonarcoHatDrv CASE SENSITIVE!
- cfgname = monarcohat.rio
- factor = 1

• Leave the other parameters intact.


w Blo	ock prop	erties				? ×
Block	<					
Block	k name:			Block type:		
MNF	ર			execlib\IODRV		
Block	k type des	cription:				
REX	(YGEN inp	ut/output d	iver			
Oper	n block do	cumentatio	<u>ı</u>	Ŭ	Toggle quick reference	
Para	ameters	Runtime	Style			
Sc	alar paran	neters				
	Par	ameter	Value	Туре	Description	
1	module	e	MonarcoDrv 🧔	String	Module name	
2	classna	ime	MonarcoHatDrv	String	I/O driver class name	
3	3 cfgnan	ne	monarcohat.rio	String	Configuration file na	me
4	1 factor		1	Long	Execution factor	
5	5 stack		10240	Long	Stack size [bytes]	
6	5 pri		3	Long	Driver thread logical	priority
7	7 timer		🗌 off	Bool	Driver is a source of t	ime
mod	lule: Modu	le name				
淡 C	onfigure	•			ОК	Cancel

Remember to click the Configure button. This will create a default I/O driver configuration file (.rio). Keep the default values and close the dialog.

W Monarco Driver	– 🗆 X
K ONARCO	RS-485 Configuration Baudrate 9600 Parity none Data bits 8 Stop bits one SPI Configuration SPI Device /dev/spidev0.0 SPI Clock 4000000 OK Cancel

As the final step, rename the $\tt IODRV$ block to $\tt MNR,$ which will serve as a prefix for all I/O signals of this driver.

The executive of the $\mathsf{REXYGEN}$ system is configured, your project should look like this:

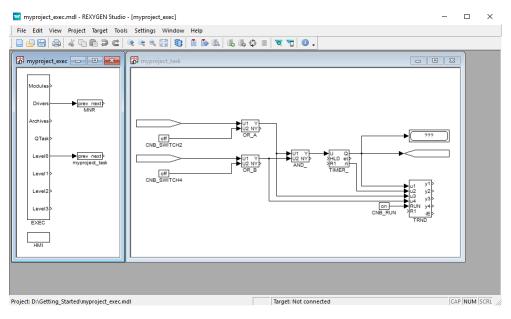

7.3.2 Modifications in the task

In the task double-click the input flag and set $GotoTag = MNR_DI1$.Note the MNR prefix and two underscore characters. The first physical switch will be connected to DI1.

Block							
	name:			Block type:			
From				From			
	type description:						
Sign	al connection or input						
Open block documentation			III Toggle quick reference				
	meters Runtime	Style					
	Parameter	Value		Туре	Descriptio	n	
1	GotoTag	MNR_DI1	<i>_</i>	String	Goto tag		

The second physical switch will be connected to DI2 (MNR__DI2).


The timer output will be routed to DO1 which will serve as the output signal (MNR_DO1).

Similarly for other inputs and outputs we could use the following flags:


- Goto, MNR__DO4 digital output 4
- From, MNR__DI3 digital input 3
- From, MNR__AI1 analog input 1

A detailed description of the I/O driver for Monarco HAT is available in a separate manual [6].


The pinout of the Monarco HAT is shown in the following picture:

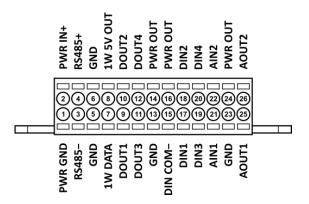

Your project should now look like this:

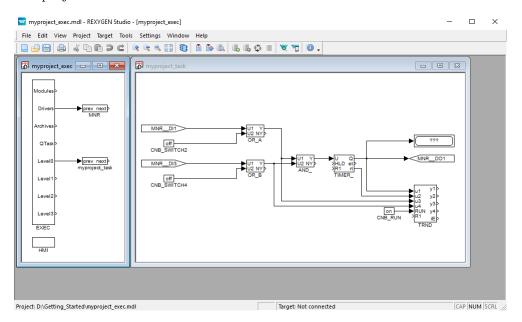

After compiling the project and downloading it to the Raspberry Pi the control algorithm interacts with the physical world. Again it is possible to switch to Watch mode and observe the signals in real-time or analyze the trends of signals. Flip the physical switches and watch the signals.

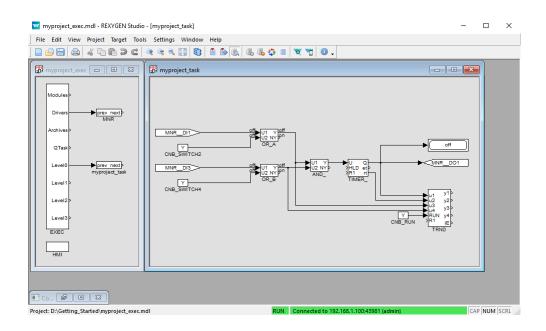

7.4 Updating the HMI

It is also necessary to update the HMI. The CNB_SWITCH1 and CNB_SWITCH3 blocks are no longer present in the algorithm. Moreover, we need to replace virtual input elements (DW) with indicators (DR). Therefore open the index.hmi.js file and replace

```
{type: 'DW', alias: 'switch1', desc: 'Switch 1',
    cstring: 'myproject_task.CNB_SWITCH1:YCN'},
```

with

```
{type: 'DR', alias: 'switch1', desc: 'Switch 1',
    cstring: 'myproject_task.OR_A:U1'},
```


Similarly for switch no. 3, replace

```
{type: 'DW', alias: 'switch3', desc: 'Switch 3',
    cstring: 'myproject_task.CNB_SWITCH3:YCN'},
```

with

```
{type: 'DR', alias: 'switch3', desc: 'Switch 3',
    cstring: 'myproject_task.OR_B:U1'},
```

Save the file, compile and download the project again and open the web interface. Push the two physical switches and wait until the timer triggers the output. Alternatively, you can still use the virtual switches. This demonstrates that you can combine physical and virtual input elements.

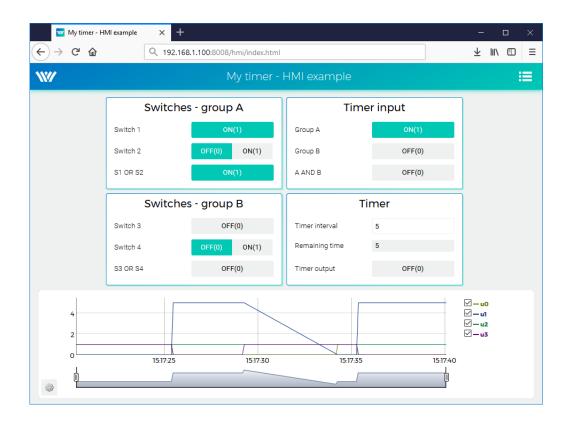

7.5 Additional information

7.5.1 Detailed description of the driver

A detailed description of the IO driver for Monarco HAT is available in a separate manual [6].

7.5.2 Examples

Example projects and a set of all supported I/O flags are included in the installation package of the REXYGEN system development tools. In REXYGEN Studio, go to menu File \rightarrow Start from an Example Project and select one of the Monarco HAT examples. As mentioned earlier, the most up-to-date information about examples are available at

https://www.rexygen.com/example-projects/

Chapter 8 Summary

Congratulations, you have created the example 0121-01 from scratch! You have learned how to develop, compile and run your algorithms on the Raspberry Pi. The interaction with sensors and actuators is provided via input-output driver of the REXYGEN system, which you have learned to configure and use.

You have achieved quite a lot in a relatively short time, haven't you? The purpose of this guide was to quickly show you the basic steps and tools for developing a project.

Now it's time to focus on your own project and keep learning on the go. There are function blocks which are much more powerful than the ones mentioned in this guide, there are many inspiring example projects, there are additional I/O drivers which you can use to expand the scope of your project, there are many ways to exchange data with external systems and devices, etc.

Remember that whenever you have some achievement to share, we will be happy to hear from you. And whenever you encounter any difficulties, we will be happy to help. You can reach us at support@rexygen.com.

Appendix A

Graphical HMI with REXYGEN HMI Designer

Chapter 6 describes the creation of a simple WebBuDi user interface. The REXYGEN development tools also contain the REXYGEN HMI Designer program which is a tool for designing custom graphical visualizations from predefined components¹. The REXYGEN HMI Designer is based on the well-known open-source vector editor InkscapeTM https://inkscape.org/en/.

In this chapter we'll develop an alternative HMI for the example 0101-01. Just like in the case of the WebBuDi user interface, the SVG file created with REXYGEN HMI Designer will serve as a source file which will become a part of your REXYGEN project. During compilation of the project the SVG file will be processed and converted to HTML, JS and CSS files.

A.1 Initializing the HMI design

After launching the REXYGEN HMI Designer from *Start Menu* you will find a clean page. The first thing to do is to initialize the new visualization. The HMI is configured via the *REXYGEN HMI* extensions. Navigate to *Extensions* \rightarrow *REXYGEN HMI* \rightarrow *Edit HMI Config* in the menu.

¹Definition of custom components is also possible but it requires a bit of Javascript coding.

New document 1 - RexHMI Designer		
<u>File Edit View Layer Object Path</u>	<u>T</u> ext Filters Extensions <u>H</u> elp	
	Previous Extension Previous Extension Settings	Alt+Q . Shift+Alt+Q . Shift+Alt+Q
N	REXYGEN HMI	Browse Components Library Ctrl+L
F	Arrange	 Edit Component Ctrl+E
R WW RI	EXYGEN Colour	 Edit HMI Config
FINI	Document	Export HMI Ctrl+H
	Export	 Group Animation Ctrl+.
E	Gcodetools	Update Components
	Generate from Path	Version Info
	Images	
	JessyInk Modify Path	
	Raster	
\bigcirc	Render	
€ <u>}</u>	Stylesheet	•
	Text	
0	Typography	
20	Visualise Path	
	Web	>
<u>T</u>		
V		
>>		» »
<		4
Fill: N/A O: 0 ↓ ₩ ⓓ •L Stroke: N/A	Layer 1 🔻	X: 388,57 Y: 1042,86 Z: 35%

This extension adds a special component which contains general settings of the HMI. Close it with the OK button for now.

New document 1 - RexHMI Designer	g REX HMI Configuration	
File Edit View Layer Object Pat	Connections Options HTML export	
	Alias Connection String	Туре
		- E
		<u>ک</u> (*)
6		
6 20 24		D **
2		
	+ - Browse Save	.csv Load .csv
» X		
Fill: N/A or a fill the second	OK	Cancel
Fill: N/A O: 0 🐳 🕷	Layer 1 CITL CITCK to select in groups, drag to move non vert	,71 Y: 560,00 Z: 35% €


In order to include the HMI during the $\mathsf{REXYGEN}$ project compilation, the file name

has to end with .hmi.svg. Save the file as e.g. designer.hmi.svg to the hmisrc subfolder of your project. Use the standard $File \rightarrow Save as$ menu.

Note: If you want to replace the WebBuDi interface with the REXYGEN HMI Designer interface just delete the index.hmi.js and save the HMI as index.hmi.svg.

A.2 Adding the first HMI components

Now we will add some displays and inputs. The REXYGEN HMI Designer contains a library of components which you can use to build your HMI. The library is available through *Browse Components Library* extensions. Navigate to *Extensions* \rightarrow *REXYGEN HMI* \rightarrow *Browse Components Library* (Ctrl+L). It will open the explorer window with several folders. Open the GENERAL folder and drag&drop the Display to the drawing. The display will be used as an indicator of the remaining time in the TIMER function block.

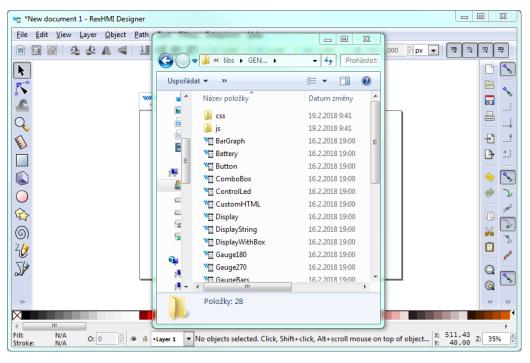

For configuration of the display settings select the display by mouse click on top of it and use the *Edit Component* extension from *Extensions* \rightarrow *REXYGEN HMI* \rightarrow *Edit Component* (Ctrl+E). When the configuration dialog is opened you can change the *Title* to *Display_remaining*. The Edit Component dialog has two tabs: *Data points* and *Options*.

The *Data points* tab contains three items defining the behavior and animations of the component. Each data point contains an alias, which is in fact a connection to live data from the REXYGEN algorithm.

• value – The value to display.

- disable_by If true the display is disabled and data are no longer updated.
- hide_by If true the display is hidden.

The value property contains T_value . The T will be later automatically substituted by the *Title* of the component, resulting in the Display_remaining_value alias. The disable_by and hide_by data points are optional. Leave them blank at the moment.

The *Options* tab contains several properties which are specific for the Display component. You can find the description of each component and property in [5]. Leave the default values for now and press OK.

Note: Each component is in fact one SVG group with unique content. You can copy the components all over the screen using copy (Ctrl+C) and paste (Ctrl+V) approach.

Edit HMI Component		E E	dit HMI Component	
Title (\$T): Display_remaining Data points Options	ID: Display Module: Display Version: 10		e (\$T): Display_remaining	ID: Display Module: Display Version: 10
value ST_	_value		format	number 🔻
disable_by			text_format	
hide_by			scale	1
			offset	0
			decimals	2
			color	#000000
			colorAbove	#df2626
			colorBelow	#0074c5
			rangeMax	10
			rangeMin	0
Browse Aliases			units	
	OK Cancel			OK Cancel

Now we will add controls for all the switches (CNB blocks). All of them will be controlled using the *PushOnOff* components. Add them from the library. Select the first *PushOnOff* and open the editor dialog *Extensions* \rightarrow *REXYGEN HMI* \rightarrow *Edit Component* (*Ctrl+E*). Change the title to *PushOnOff_SW_1* and select the *Options* tab. Select the **ToggleButton** item in the **type** property list. Close the *Edit Component* dialog using OK button. Copy-paste the button three times and remember to change the titles to *PushOnOff_SW_2*, *PushOnOff_SW_3*, *PushOnOff_SW_4*).

Note: Throughout the REXYGEN HMI Designer you can use double click in Options tab to open the corresponding configuration dialog (color picker, number input, etc.).

Edit HMI Component		
Title (\$T): PushOnOff_SW_2	2 ID: Module:	g2715 PushOnOff
Data points Options	Version:	
type	ToggleButto	n 🔻
reverseMeaning	PushButton ManualPulse	
colorFalse	ManualPulse ToggleButto	
colorTrue	#00C8B4	
writePerm	[]	
		OK Cancel

Now we have four PushOnOff buttons and one Display and we want to link all components with live data from the target device.

A.3 Linking HMI components with the running algorithm

Open the HMI Configuration dialog either using Extensions $\rightarrow REXYGEN HMI \rightarrow Edit$ HMI Config or just unselect all components in the drawing (click outside any component) and press Ctrl+E. The configurator parses all components and creates a list of used Aliases. Each of them should be linked with one signal in the running algorithm. You can either fill in each connection string manually or you can use the Browse function.

Alias	Connection String	Туре
Display_remaining_value		R 🔻
PushOnOff_SW_1		w 👻
PushOnOff_SW_2		w -
PushOnOff_SW_3		w -
PushOnOff_SW_4		w -

The *Browser* requires a target device with running algorithm. Make sure the algorithm is running, see Section 6.2. Also the target URL must be set. Press *Browse* button. The login dialog will be opened. Change Target to 192.168.1.100:8008 (replace 192.168.1.100 with the IP address of your Monarco HAT). Unless you changed the login credentials, use the default username admin with an empty password. After a successful login the connection tab is expanded with a tree-view of the running algorithm (you have already seen this tree-view in algorithm diagnostics).

Alias		Connection String	Туре
Display_remaining_	value		R 🔻
PushOnOff_SW_1			w -
PushOnOff_SW_2			w -
PushOnOff_SW_3			w -
PushOnOff_SW_4			w -
	Target: Usernam Password Save pas	1:	
+ - Brow	100	Save .csv	Load .csv

Select *Connection String* field of the Display_remaining_value item and afterwards browse the tree to the TIMER_ block and double-click the rt parameter. The connection string of the parameter is copied to the Display_remaining_value alias, which is shown in the next figure.

Alias	Connection String	Туре	myproject_task
Display_remaining_value	myproject_task.TIMER_:rt	R 🔻	CNB_RUN CNB_SWITCH1
PushOnOff_SW_1		w -	
PushOnOff SW 2		w -	CNB_SWITCH3 CNB_SWITCH4
PushOnOff_SW_3		w -	OR_A
PushOnOff_SW_4		W 🔻	AND_ IND_ INDER
			• <u>•</u> • • • • • • • • • • • • • • • • •
			HLD
			MI R1
			P mode
			P pt
			🕑 Q
			🕒 et
			🕒 rt
			Display
			TRND

Once the display is linked we will also link the switches. Just browse the tree to CNB_SWITCH1, select the *Connection String* field of the *PushOnOff_SW_1* alias and double-click the YCN parameter. Repeat this for the remaining connection strings. Afterwards press OK to save the settings and close the dialog.

REX HMI Configuration		
Connections Options	HTML export \	
Alias	Connection String	Туре
Display_remaining_value	myproject_task.TIMER_:rt	R 🔻
PushOnOff_SW_1	myproject_task.CNB_SWITCH1:YCN	w -
PushOnOff_SW_2	myproject_task.CNB_SWITCH2:YCN	w -
PushOnOff_SW_3	myproject_task.CNB_SWITCH3:YCN	w -
PushOnOff_SW_4	myproject_task.CNB_SWITCH4:YCN	w -
+ - Browse	Save	.csv
	ОК	Cancel

The interactive components in REXYGEN HMI Designer are just parts of the drawing. The user can position the components arbitrarily and add as many decorative static components to as needed. We will add some text descriptions to distinguish individual buttons. Use the *Text tool* (F8), click anywhere in an empty space and start typing. Pick the *Select and Transform tool* (F1) afterwards and move the texts and buttons.

Note: More information about custom drawing can be found in Inkscape tutorials (See the Help \rightarrow Tutorials \rightarrow Inkscape: Basic)

	ayer <u>O</u> bject <u>P</u> ath <u>T</u> ext Fi			
	REXYCEN HMI Config Switch 1 switch 2 Switch 3 switch 4	Timer input S1 OR S2 S3 OR S4 A AND B	Timer timer interval remaining X.XX output	
<	0: 0 ☆ 🎂 3 •Layer 1	Click to Select and Transform	objects, Drag to select many objects.	X: 1358,54 Y: 202,44 Z: 41%

A.4 Adding more HMI components

Next we will add more components to control the timer and show the status of the OR and AND blocks. Open the Elements library (Ctrl+L) and add one *Input* and four *Led* components. The LEDs will show the status of Boolean values and the *Input* will be used for changing the default timer interval value.

In the *Led* components just edit the Title via the *Edit Component* extension (select the component by single click and press Ctrl+E). The titles should be Led_OR_A, Led_OR_B, Led_AND, and Led_TIMER_OUT respectively. Finally edit the *Input* component by changing the Title to Input_interval.

The last component we need is a graph showing the time-plot of data from the TRND block. Use the components library (Ctrl+L) and add a TRND component. You can adjust its size to fit the desired position. Edit the component (Ctrl+E) and change the Title to TRND and switch to the *Options* tab. Double-click the signals property. Add the following labels using the plus (+) button: timer out, rem. time, OR A, OR B. These labels will be shown in the legend of the graph.

wa Edit	HMI Component		
Title (\$	T): TRND	ID:	TRND
		Module:	TRND
		Version:	10
	points Options		8 23
ť	· · · ·		
s		abel	
Ł	timer out		
r	rem. time		
н	OR A		
	OR B		
	+ •	ОК	Cancel
			OK Cancel


A.5 Additional links to the running algorithm

When all the components are in place we link them to the running algorithm again. Just repeat the procedure described in Section A.3, open the HMI Configuration dialog (*Extensions* \rightarrow *REXYGEN HMI* \rightarrow *Edit HMI Config* and browse the running algorithm to pair the remaining aliases with corresponding connection strings. The list is shown in the following image.

Alias	Connection String	Туре
Display_remaining_value	myproject_task.TIMER_:rt	R -
Input_interval_W	myproject_task.TIMER_:pt	w -
Led_AND	myproject_task.AND_:Y	R -
Led_OR_A	myproject_task.OR_A:Y	R 🔻
Led_OR_B	myproject_task.OR_B:Y	R 🔻
Led_TIMER_OUT	myproject_task.TIMER_:Q	R 🔻
PushOnOff_SW_1	myproject_task.CNB_SWITCH1:YCN	w -
PushOnOff_SW_2	myproject_task.CNB_SWITCH2:YCN	w -
PushOnOff_SW_3	myproject_task.CNB_SWITCH3:YCN	w -
PushOnOff_SW_4	myproject_task.CNB_SWITCH4:YCN	w -
TRND	myproject_task.TRND:u1	R 🔻

A.6 The final steps


Congratulations, your first graphical HMI is almost ready! Add a few rectangles which will visually divide the HMI into individual sections. Use the *Squares and rectangles tool* (F4), draw the rectangle, pick a color from the palette and send the rectangle to the background using the End key. Do not forget to save the drawing.

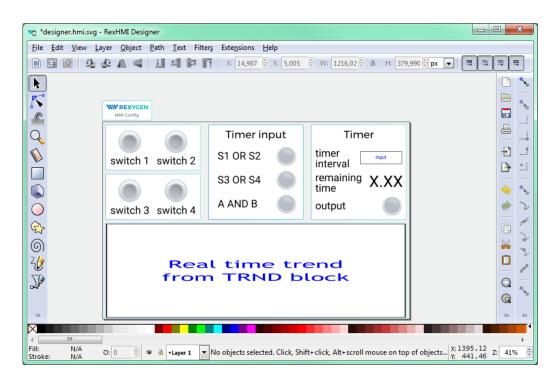

As mentioned earlier, the *.hmi.svg files in the hmisrc folder are automatically processed while the project is compiled in the REXYGEN Studio application. The project main file must contain the HMI block with GenerateRexHMI parameter enabled. This was already covered in Section 6.3 so you should have everything ready.

Once you compile the project again and download it to your Raspberry Pi, the HMI will be accessible via a web browser. Navigate to

http://192.168.1.100:8008/hmi/designer.html (replace 192.168.1.100 with the IP address of your Monarco HAT). You will see your HMI with live data.

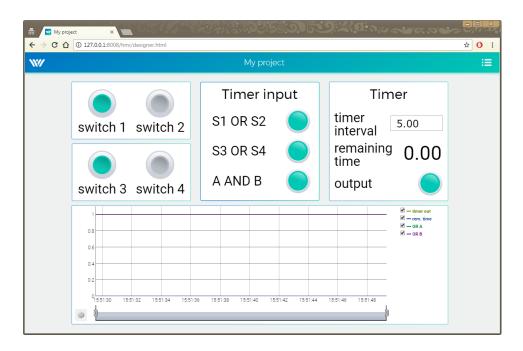

This tutorial covers only the very basic components. If you want to get more information about additional components, see [5].

Appendix B

Raspberry Pi OS image with REXYGEN

For fast use of REXYGEN on the Monarco HAT platform, an image of the Raspberry Pi OS^1 is automatically generated. This image is prepared using RPi-Distro/pi- gen^2 and should contain everything you need to use Monarco HAT immediately for your projects. The image can be used on your Monarco HAT in four easy steps (see Section B.1). List of all changes comparing to the original Raspberry Pi OS image is shown in Section B.2.

B.1 Commissioning the image

IMPORTANT: This procedure will delete all old data and settings from your SD card. Make sure you have all the necessary files stored elsewhere!

- It is highly recommended to use the latest version of the official Monarco HAT OS image with REXYGEN which you can download from http://download.rexcontrols.com/images/.
- After you download the file, write it to a SD card with a capacity of 4 GB or more. On Windows PC you can use a Win32 Disk Imager tool or any other software capable of writing images: https://sourceforge.net/projects/win32diskimager/.
- 3. Put the SD card in and power up your Monarco HAT.
- 4. After operating system expansion (which is done automatically with the first boot), you can log in via SSH with name pi and password monarco.io. Please, change the password using raspi-config or passwd as soon as possible.

¹Official supported operating system by raspberrypi.org, see https://www.raspberrypi.org/ software/operating-systems/.

²Tool used to create Raspberry Pi OS images (previously known as Raspbian), see https://github.com/RPi-Distro/pi-gen.

B.2 Changes

Changes compared to the official version of the image are listed bellow:

- 1. SSH access is enabled by default.
- 2. Following 3-rd party packages are installed:
 - mc
 - hdparm
 - iperf
 - screen
 - tcpdump
 - owserver
 - owshell
 - i2c-tools
- 3. Following **REXYGEN** packages are installed:
 - RexCore latest release
 - REXYGEN DWM Device Web Management
 - RexArc utility to export data from REXYGEN Archives
 - rex-monarcodrvt REXYGEN driver for Monarco HAT
 - rex-owsdrvt REXYGEN 1-Wire driver
- 4. The systemd-networkd daemon is used to manage network configurations.
- 5. The eth1 is configured with parameter DHCP=yes. See

sudo nano /etc/systemd/network/eth1.network

This can be used for an Ethernet to USB adapter.

- 6. RexCore log messages are stored in /etc/log/syslog (duplicate logging to a file /etc/log/messages is disabled).
- 7. The datetime format for RexCore logs has been modified. The /etc/rsyslog.d/time.conf file has been created and the

dateext

command was added into the /etc/logrotate.d/rsyslog.

Appendix C

Licensing of the REXYGEN system

The licensing model of the **REXYGEN** system is quite simple:

- The development tools are free to use, you can install it on as many computers as you want.
- The RexCore runtime module always needs a licence to run on your Raspberry Pi. There are DEMO licences available at no cost and there are permanent licences which you can purchase. Each Raspberry Pi needs an individual licence.

C.1 Obtaining a DEMO licence


The DEMO licence is intended for evaluating, testing and educational purposes. Feel free to experiment with the DEMO licence as long as you need. Commercial use of the DEMO licence is not allowed.

When you try to run your algorithm on a device which does not have a valid licence, you are offered a few options. Unless you already have a licence key or a licence voucher, you'll need to get a DEMO licence.

W No licence on target device	Х
No valid licence key has been found on the target device.	
Request a free DEMO LICENCE	
Try REXYGEN at no cost	
I have a LICENCE VOUCHER	
Apply your licence voucher and get a licence key	
I have a LICENCE KEY	
Enter your licence key and you are ready to go	
Connect anyways	
Target device identifier (Site ID):	
WGWY-JJW8-GGSZ-NMA9-2EFI-S4LT-QW9Z-MSYH	
Version:	
REXYGEN runtime core version 2.50.7.9077	

Identify yourself and you'll receive a DEMO licence key via e-mail. The licence key is called a SiteKey.

₩ Get DEN	10 licence key X
First name:	John
Last name:	Doe
Email:	johndoe@domain.com
Description (for your reference):
Crush test r	nachine
	Get DEMO licence
Privacy polic	y statement Registered REXYGEN user?

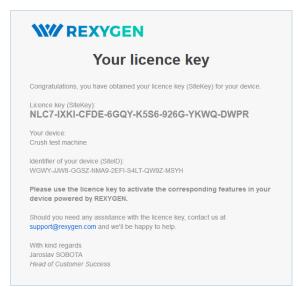

Once you have your DEMO licence key (SiteKey), apply it.

***	No licence on target device	×
	No valid licence key has been found on the target device.	
	Request a free DEMO LICENCE Try REXYGEN at no cost	
	I have a LICENCE VOUCHER Apply your licence voucher and get a licence key	
	I have a LICENCE KEY Enter your licence key and you are ready to go	
	Connect anyways	
V Vers	get device identifier (Site ID): VGWY-JJW8-GGSZ-NMA9-2EFI-S4LT-QW9Z-MSYH sion: XEXYGEN runtime core version 2.50.7.9077	
🛛 Apply i	icence key ?	>
	icence key: IXKI-CFDE-6GQY-K5S6-926G-YKWQ-	
NLC7-	Apply licence key	-DwPi



Once successfully applied, your algorithm will download to your Monarco HAT. You can review your licence keys in REXYGEN Studio. Go to menu $Target \rightarrow Li$ censing to list the licence keys and activated modules.

Site ID: WGWY-JJW8-GGSZ-	MMA9-2	2EFI-S4LT-QW	19z-msyh	
Licensed features			Registered keys	
Feature	Expires	Licence type	NLC7-IXKI-CFDE-6GQY-K5S6-926G-YKWQ-DWP	
RexCore Plus	Never	Demo		
Standard function blocks	Never	Demo		
Advanced function blocks	Never	Demo		
Motion control blocks (single- and	Never	Demo		
Modbus driver - TCP master	Never	Demo		
Modbus driver - serial master (RTU)	Never	Demo		
Modbus driver - TCP slave	Never	Demo		
Modbus driver - serial slave (RTU)	Never	Demo		
EtherCAT driver - master node	Never	Demo		
CAN/CANopen driver	Never	Demo		
1-Wire driver (via OWFS)	Never	Demo		
Siemens PLC communication driver	Never	Demo		
Database access driver (via ODBC)	Never	Demo		
Advanced matrix function blocks	Never	Demo		
REXLANG programmable function	Never	Demo		
Motion control blocks (coordinate	Never	Demo		
Omron PLC communication driver	Never	Demo		

Evaluation version of RexCore (REXYGEN runtime core) is functional for 2 hours. It is possible to run your algorithm on the Monarco HAT but you cannot store it permanently. The algorithm resides only in the RAM memory therefore it will not run after a restart or power-up. You can use almost all function blocks, see [1]. The RexCore runtime core on the target device is terminated after 2 hours of operation in demo mode without any warning. After a restart, you have another 2 hours for your experiments.

C.2 Obtaining a permanent licence

It is necessary to activate the RexCore runtime module and optional additional modules for permanent operation. This can be done using the licence, which you can obtain at

www.rexygen.com/pricing

C.2.1 Activation of the permanent licence

Each device running the RexCore runtime module is identified by the so-called SiteID tag. The purchased licence must be associated with the hardware device, i.e. with the SiteID tag.

1. In REXYGEN Studio, connect to the device and go to menu $Target \rightarrow Licensing$. A dialog pops up and you will see the SiteID and your licences.

ite ID: WGWY-JJW8-GGSZ-1	MA9-	2EFI-S4LT-QW	9z-msyh	
Licensed features			Registered keys	
Feature	Expires	Licence type	NLC7-IXKI-CFDE-6GQY-K5S6-926G-YKWQ-DWP	
RexCore Plus	Never	Demo		
Standard function blocks	Never	Demo		
Advanced function blocks	Never	Demo	-	
Motion control blocks (single- and	Never	Demo		
Modbus driver - TCP master	Never	Demo		
Modbus driver - serial master (RTU)	Never	Demo		
Modbus driver - TCP slave	Never	Demo		
Modbus driver - serial slave (RTU)	Never	Demo		
EtherCAT driver - master node	Never	Demo		
CAN/CANopen driver	Never	Demo		
1-Wire driver (via OWFS)	Never	Demo		
Siemens PLC communication driver	Never	Demo		
Database access driver (via ODBC)	Never	Demo		
Advanced matrix function blocks	Never	Demo		
REXLANG programmable function	Never	Demo		
Motion control blocks (coordinate	Never	Demo		
Omron PLC communication driver	Never	Demo		

2. Delete any DEMO licence keys if present.


3. Afterwards, click the *Apply licence voucher* button and enter your licence voucher code.

W Apply licence voucher X
Licence voucher:
VZI-QMQ-61U
Description (for your reference):
Crush test machine
Apply licence voucher
Privacy policy statement Registered REXYGEN user?
Target device identifier (Site ID):
WGWY-JJW8-GGSZ-NMA9-2EFI-S4LT-QW9Z-MSYH
Version:
REXYGEN runtime core version 2.50.7.9077

4. You are asked to confirm the association – this is the last and irreversible step.

W Apply lice	ence voucher permanently?	×	
	sible operation. Once the voucher is applied, it is permanen rdware device.	tly	
Are you sure	you wish to proceed?		
	YES		
A licence key will be generated			
	NO		

5. The so-called SiteKey licence key is generated from your licence voucher and it is stored in your device. The licence key allows permanent operation of the runtime core.

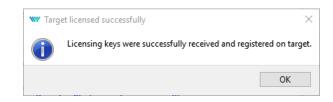

6. To check the licence, make sure the REXYGEN Studio is connected to the device and open the licensing dialog again ($Target \rightarrow Licensing$). Check that the licence was applied correctly and that the RexCore runtime module no longer runs in demo mode.

e ID: WGWY-JJW8-GGSZ-	NMA9-	2EFI-S4LT-QW9	JZ-MSYH
Licensed features			Registered keys
Feature	Expires	Licence type	GENM-MU3J-HYHC-PMD5-IS92-BWTW-7U6M-5RP
tandard function blocks	Never	Regular	
dvanced function blocks	Never	Regular	
Aodbus driver - TCP master	Never	Regular	
Andbus driver - serial master (RTU)	Never	Regular	
Aodbus driver - TCP slave	Never	Regular	
Aodbus driver - serial slave (RTU)	Never	Regular	
AN/CANopen driver	Never	Regular	
-Wire driver (via OWFS)	Never	Regular	
iemens PLC communication driver	Never	Regular	
atabase access driver (via ODBC)	Never	Regular	
EXLANG programmable function	Never	Regular	
utotuning controllers	Never	Regular	
exCore Professional	Never	Regular	
mron PLC communication driver.	. Never	Regular	

7. It is highly recommended to check the licence again after a reboot of the device.

Bibliography

- [1] REX Controls s.r.o.. Function blocks of REXYGEN reference manual, 2020. \rightarrow .
- [2] REX Controls s.r.o.. RexCore User manual, 2020. \rightarrow .
- [3] REX Controls s.r.o.. OpcUaDrv driver of REXYGEN user guide, 2020. \rightarrow .
- [4] REX Controls s.r.o.. REXYGEN Studio User manual, 2020. \rightarrow .
- [5] REX Controls s.r.o.. REXYGEN HMI User manual, 2020. \rightarrow .
- [6] REX Controls s.r.o., MonarcoDrv driver of REXYGEN user guide, 2020. \rightarrow .

Documentation reference number: 14711