## **WW REXYGEN**

www.rexygen.com

## **REXYGEN** Licensing

User guide

REX Controls s.r.o.

Version 3.0.5 2025-07-04 Plzeň (Pilsen), Czech Republic

# Contents

1	Introduction         1.1 Basic terms	<b>2</b> 3
2	Licensing using REXYGEN Studio2.1No Licence Dialog Window2.2Obtaining and Activating a DEMO Licence2.3Obtaining and Activating a Permanent Licence2.4Licence Management	<b>4</b> 4 6 6 6
3	Licensing REXYGEN using REXYGEN DWM         3.1 Obtaining and Activating a DEMO Licence         3.2 Obtaining and Activating a Permanent Licence         Bibliography	7 7 8 8

## Chapter 1

# Introduction

The licensing model of the **REXYGEN** system is relatively simple:

- The REXYGEN Studio development environment is available for free and can be installed on any number of computers.
- A valid licence is always required to run the RexCore module on the target platform. Free DEMO licences are available, as well as the option to purchase permanent licences.

To operate the **REXYGEN** system permanently on a target device, it is necessary to purchase a permanent licence. The licence price is determined based on several factors reflecting the size and complexity of the developed application:

- number of function blocks,
- number of drivers and I/O channels,
- number of processor cores used,
- scope of visualization and operator control (Human-Machine Interface, HMI),
- optional libraries of function blocks,
- additional tools.

The entire **REXYGEN** licensing policy is explained in detail on the eshop. During project compilation, all relevant factors are displayed in the compilation window, including the list of required licences for permanent operation of the application.

Currently, there are two methods of device licensing:

- using the REXYGEN Studio development environment,
- using the REXYGEN DWM web interface (if installed on the device).

Both procedures are described in detail in the following chapters.

#### 1.1 Basic terms

To understand licensing correctly, it is necessary to know the following terms:

- **Site ID** A unique identifier of the target device used to associate the device with a licence.
- **License voucher** A code that is not yet associated with a specific device and can be used to generate a licence key.
- Site Key A licence key generated from a licence voucher that allows the RexCore runtime kernel to run on a specific device.
- **DEMO licence** This licence is intended for evaluation, testing, and educational purposes. You can experiment with the DEMO licence for as long as you need. Commercial use of the DEMO licence is not allowed. The evaluation version of RexCore (REXYGEN runtime core) is functional for 2 hours. You can run your algorithm on the platform, but you cannot save it permanently. The algorithm remains only in RAM, so after a restart or power-off, it will not run. You can use almost all function blocks, see [1]. The RexCore on the target device will terminate after 2 hours of operation in DEMO mode without any warning. After a restart, you have another 2 hours to experiment.
- **Permanent licence** This is one of the Starter, Plus, Profi, or Ultimate licences. These licences allow permanent operation of the RexCore runtime kernel on a specific device.

Under certain circumstances, such as changing the storage media, the Site ID may change. There are several reasons for changing the Site ID, and for some, it is possible to reactivate the licence (Site Key) on a new Site ID. More information can be found in the knowledge base.

## Chapter 2

# Licensing using REXYGEN Studio

#### 2.1 No Licence Dialog Window

If there is no active valid licence on your target device, upon connection a dialog window will appear with the following options:

- **Request a licence** Allows you to purchase a permanent licence, apply an existing licence, or obtain a DEMO licence.
- I have a LICENCE VOUCHER If you already own a licence voucher, you can redeem it here.
- **I have a LICENCE KEY** If you already have a licence key for the device, you can apply it here. This option is suitable if you do not have internet access.

At the bottom of the window, the Site ID of the target device is displayed, the installed version of RexCore, and also the option to view existing licences in the browser directly on the licensing server page.



If you do not have a voucher or a key available, you can request a licence directly from the dialog window using the **Request a licence** option. Internet access is required to use this option. If you sign in with your account<sup>1</sup>, the following table will show not only available licences but also unused vouchers and licence keys for the device that are assigned to your account. If you choose to continue without an account, you will only see available DEMO licences and links to purchase permanent licences on the eshop. Whether you are signed in or not, you should see the dialogue window **Get a licence key** with a similar offer as shown in the image below.

w Get a licence key	?	×	
First name:			
Last name:			
Email:			
Description (for your reference):			
Available licences:			
RexCore Demo for Single Board Computer	Get	a licence	
REXYGEN Starter	Bu	y here	
REXYGEN Plus S	Buy here		
REXYGEN Profi S	Buy here		
REXYGEN Ultimate	Buy here		
Privacy policy statement Sign in			

 $^1 \rm You\ can\ create\ a\ free\ REXYGEN\ account\ here$ 

#### 2.2 Obtaining and Activating a DEMO Licence

For DEMO licences, the **Get a licence** button is displayed. Pressing this button, the licensing server will generate a **SiteKey** licence key based on your **Site ID**, which is automatically uploaded to your device and also sent to you via email.

#### 2.3 Obtaining and Activating a Permanent Licence

For permanent operation, you need to purchase a licence from the eshop. After purchasing the licence, you will receive a licence voucher via email, which you can apply to your target device.

Before applying the licence voucher, remove all existing DEMO licence keys using the window described in Chapter 2.4. Then, simply follow the instructions that appear after selecting I have a LICENCE VOUCHER in the window described in Chapter 2.1. After applying the licence voucher, a SiteKey licence key is generated and automatically saved to your target device. You can check that the licence was properly loaded on the target device again using the window described in Chapter 2.4.

It is recommended to check the licence again after restarting the device.

#### 2.4 Licence Management

You can manage your licence keys using REXYGEN Studio. When you are connected to the target device, select from the menu  $Target \rightarrow Licensing$  to display licence keys and activated modules. Here, you can see all activated licences and modules. You can add new licence keys, remove existing ones, import and export complete lists, or apply licence vouchers.

🚾 Licensing dialog							?	×
Site ID: EKD8-NLPM	I-4WQM-ZGDQ-I	PRK9-2MK4-A3G	F-A5HN					
	Licensed features				Registered keys	5		
Feature	Expires	Licence type	MDLE-L60	CA-ZYWU-	HRI7-GCP	W-GUS3-1	имзе-ч	MJR
REXYGEN Runtime	Never	Regular	XFPZ-H5J	J4-PHCE-	AEYD-BNG	5-CCAH-J	JFZH-B	5zQ
REXYGEN Profi S	Never	Regular						

### Chapter 3

# Licensing REXYGEN using REXYGEN DWM

REXYGEN DWM is a web tool that you can use, among other things, for easy licensing of your target device. Details about the tool can be found in [2]. If REXYGEN DWM is installed on your target device, open your web browser and enter the IP address of the device. You should see the message **Device is not licensed!** at the bottom of the screen. Please click on **Licensing**.

≡	\\\/			
	Resources	Uptime	CF	עי
0	System Info	Current time: 2020-09-16 14:39:09	Cores:	4
(÷	Network	Startup time: 2020-09-16 14:38:04	Model:	ARMv7 Processor rev 4 (v7I)
:0:	Settings ~	Uptime: a minute	Hardware:	BCM2835
a,	Service	DAM		
0	Security	RAM	Load average over 1 minute:	1.22
	File Browser	Total: 905.06 MB	Load average over 5 minutes:	0.42
Ē	Logs	Available: 785.09 MB	Processes (running/total):	1/112
ð	Password		Dicke	
Ð	Archives	🗹 ext4 🛛 🗹 vfat	tmpfs	devtmpfs
04	Licensing			
		Device: Device is not licensed! Label: Device is not licensing to	mcblk0p2 p acquire a valid licence.	

#### 3.1 Obtaining and Activating a DEMO Licence

To obtain a DEMO licence, click on **Get demo licence** and you will be redirected to the licensing server. Fill in the registration form, and a confirmation link will be sent to your email. After confirmation and validation, a licence key (SiteKey) will be displayed, which you can use for testing. Once you have your DEMO licence key, use it in REXYGEN DWM by selecting the option **Apply Licence Keys** and clicking on the **APPLY KEYS** button.

=	\\//	Licensing
•	Resources System Info Network	Active Licence Site ID BNI8-W33Y-64X6-93XJ-WDHQ-RMXG-NBK4-4J7G
0 4	Settings ~ Service	No active site keys available <u>Get demo licence</u>
0	Security	Configuration
Ē	Logs	Apply Voucher Apply Licence Keys Enter site keys 93LT-8EJJ-2HYN-U477-U4L2-FLMA-YM4W-CIBB
@ 49	Password Archives	
07	Licensing	
		APPLY KEYS

#### 3.2 Obtaining and Activating a Permanent Licence

For permanent operation, it is necessary to purchase a licence on the eshop. After purchasing the licence, you will receive a licence voucher via email, which you can apply to your target device.

In REXYGEN DWM under the Licensing tab, click on Apply Licence Voucher and enter the licence voucher. After pressing the APPLY VOUCHER button, the licence key will automatically be generated and saved to the target device. If other licences are already present, a new window will appear where you can specify what should happen with the old licences. Use the *Overwrite* option if only a DEMO licence is on the target device.

# Bibliography

- [1] REX Controls s.r.o.. Function blocks of REXYGEN reference manual, 2024.  $\rightarrow$ .
- [2] REX Controls s.r.o., REXYGEN DWM User guide, 2024.  $\rightarrow$ .

Documentation reference number: 17331